


How to Pack the Damaged Storage Media:

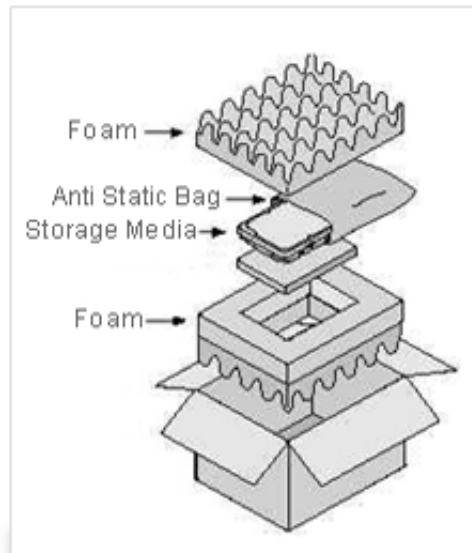

The storage media should be packed dust free.

- ❖ Pack the storage media in the anti-static bag.
- ❖ Keep the media in a box with at least 5 cm gap between the data carrier and the walls.
- ❖ Include your name and address details inside the box.
- ❖ Fill the gap with resilient material, such as foam blocks or several layers of bubble-wrap, but only with packing material like Styrofoam.
- ❖ Mark the outside of the package "FRAGILE - HANDLE WITH CARE".